



Note: Always connect the mains voltage detection (sense wire) connection of the insulation monitor to the 'MD' connector of the PurePowerSwitch. Use the cable that is supplied with the PurePowerSwitch. Never connect the mains voltage detection directly to the mains voltage!

