





ISO 230-16PP

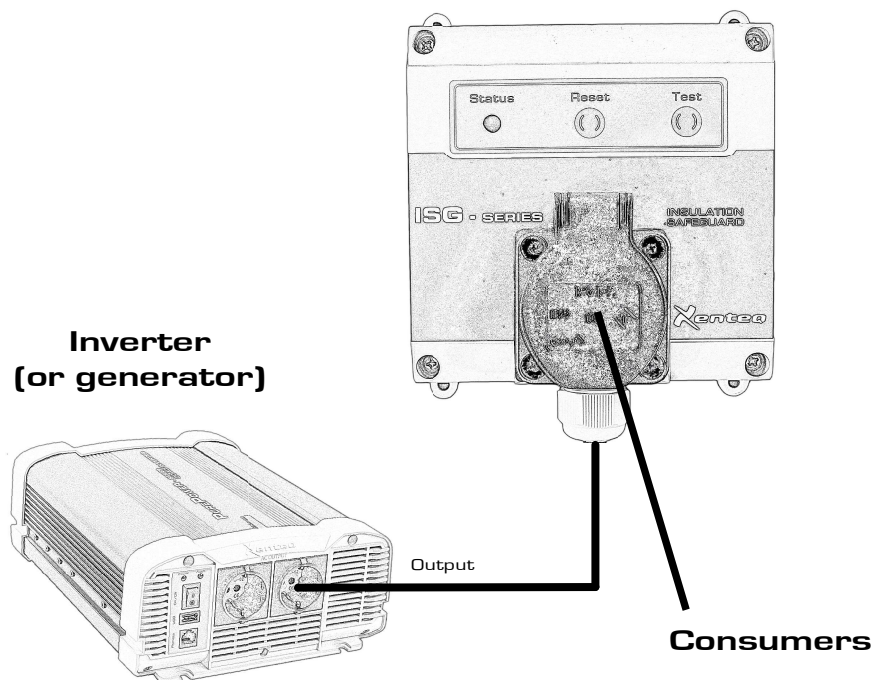


**ISG 230-10
ISG 230-25**

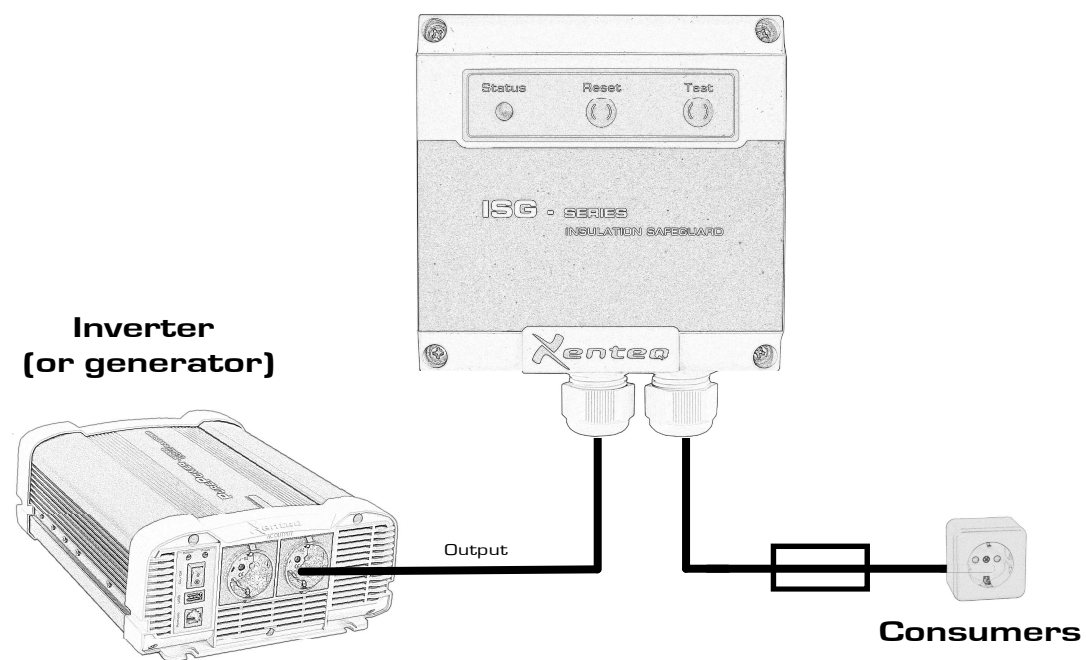

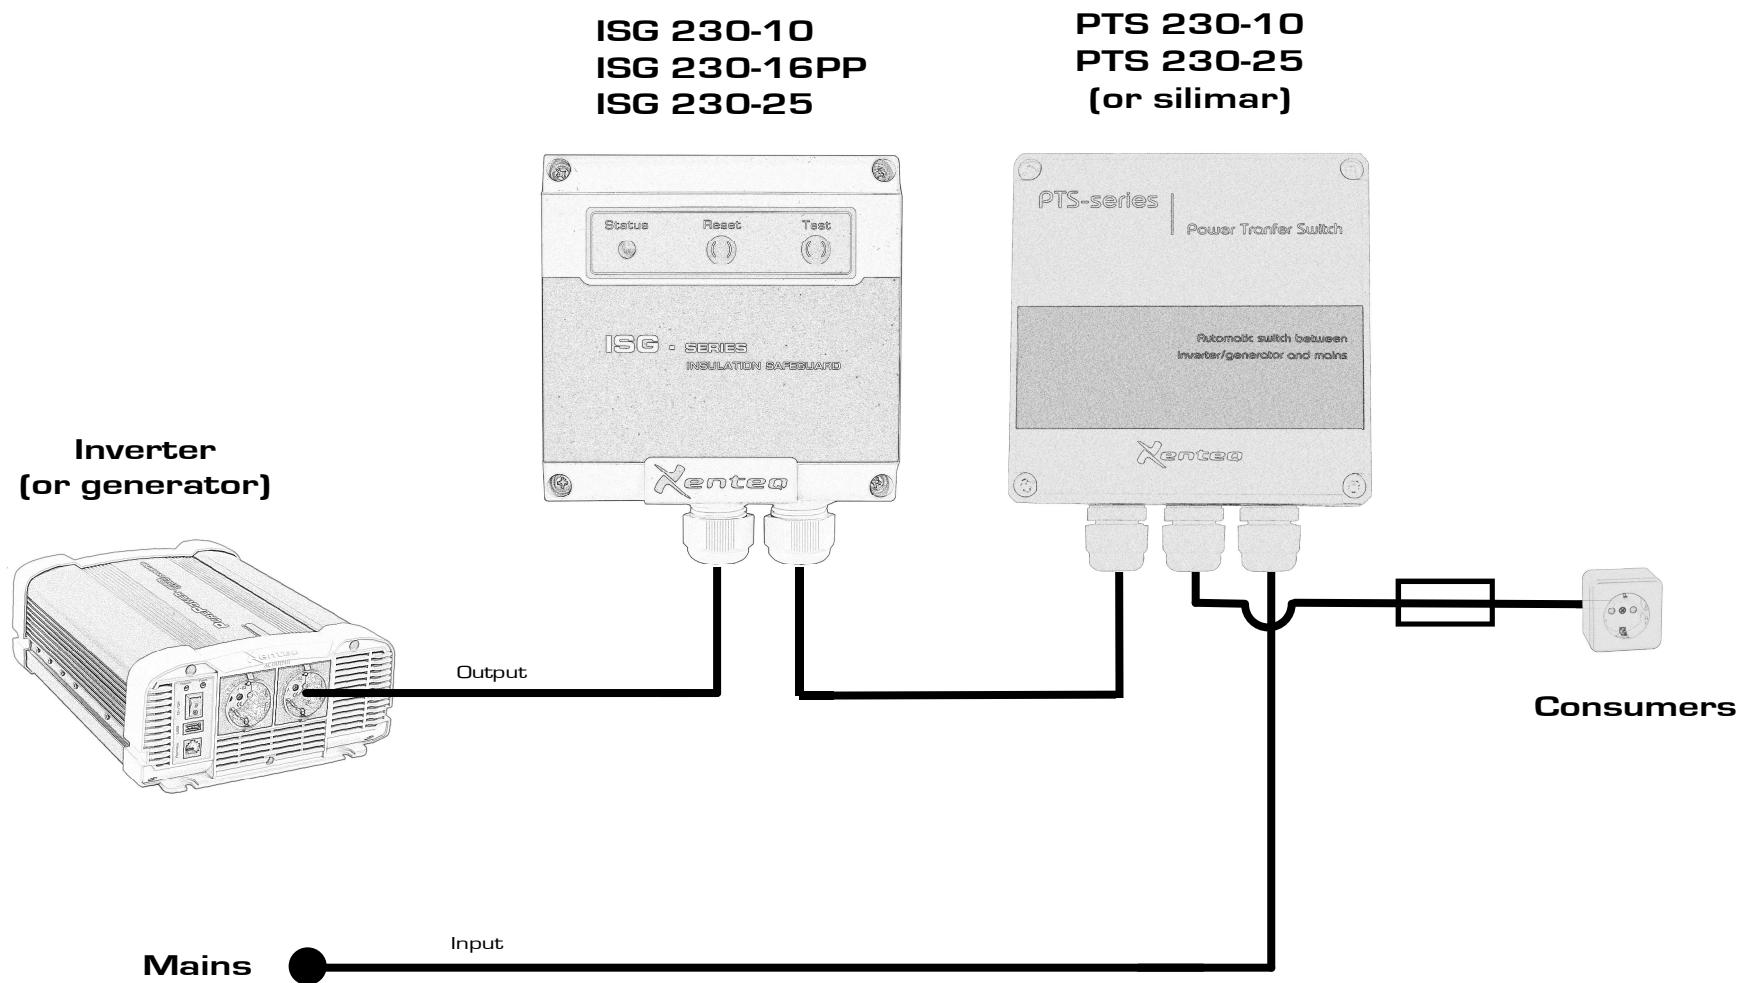

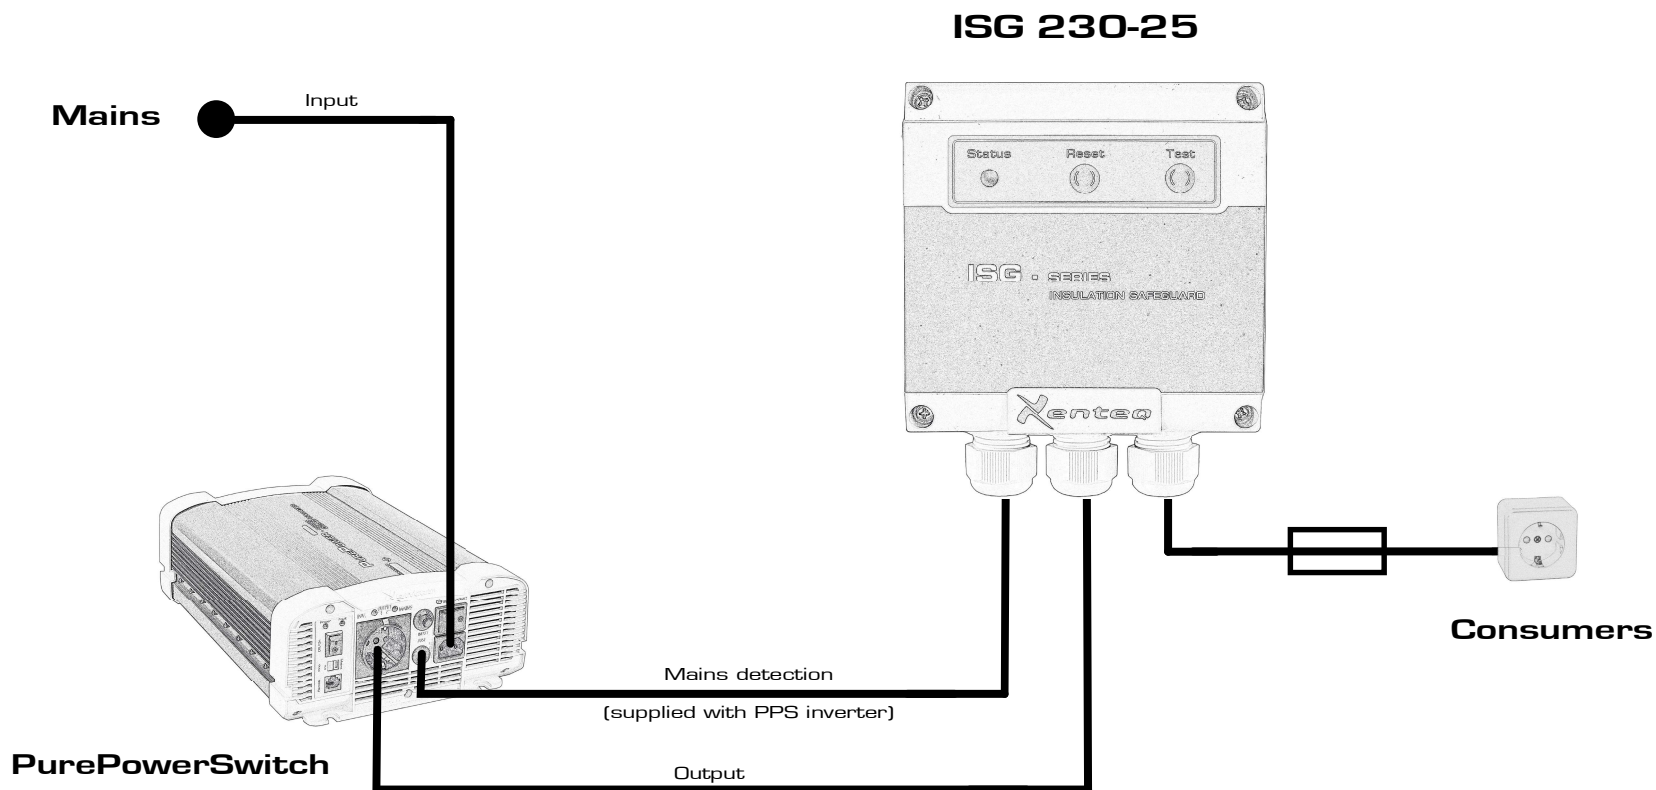

Important: Always connect the mains voltage detection (sense wire) connection of the ISG insulation safeguard to the 'MD' connector of the PurePowerSwitch. Use the cable supplied with the PurePowerSwitch for this.
Never connect the mains voltage detection directly to the mains voltage!

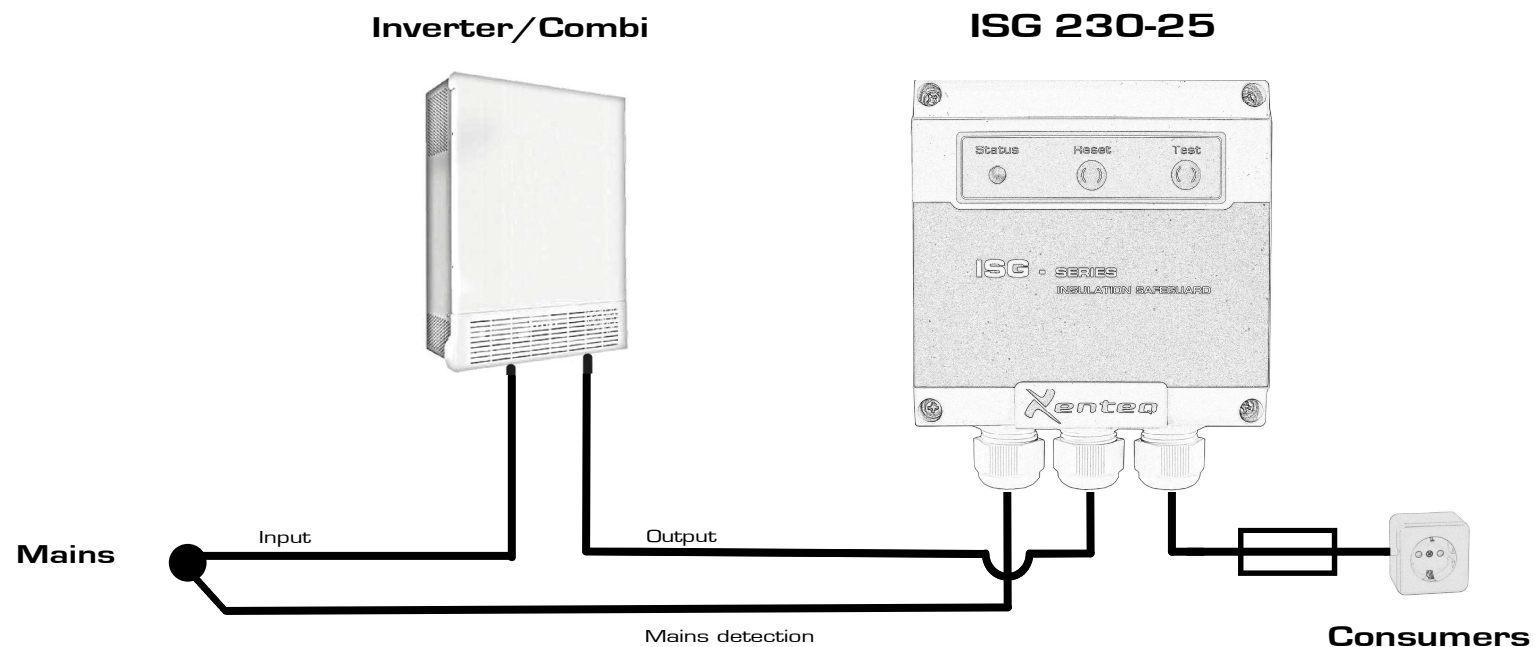

Important: There must be no voltage on the mains voltage detection cable when the inverter is in operation! This is relevant for devices with a priority switch where the inverter has priority over the mains voltage.